 


10091404

**Blank plate**

Description	Pack qty.	Art No.
Blankplate with c/plate - B series alu	20	10091404
B.1 BLINDVERSCHLUSS MIT ZENTRALSTÜCK U..	20	10091414
Blank plate with C/plate - B ant	20	10091606
B/plate with C/p & screw-fixing - B ant	20	10091616
Blankplate with c/plate S/B PW, matt	20	10091909
B/plate with C/p & screw-fixing - S/B PW	20	10091919
BLANK PLATE W.CENTRE PLAT	20	10098912
BLANK PLATE W.CENTRE PLAT	20	10098919
BLANK PLATE B1 PW	20	10098982
BLANK PLATE B1 PW	20	10098989
BLANK PLATE B1 ALU	10	6710091404
BLANK PLATE B1 ANTHRACITE	10	6710091606
BLANK PLATE B1 PW	10	6710091909
BLANK PLATE B1 PW	10	6710098982
BLANK PLATE B1 PW	10	6710098989

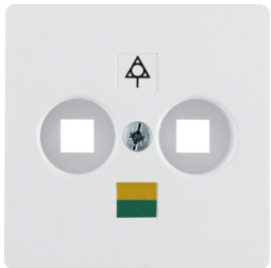

140309

Centre plate double pole socket

Description	Pack qty.	Art No.
CENTRE PLATE PW	10	140309



10191909

centre plate for cable outlet

Description	Pack qty.	Art No.
C/plate for Cable outlet & VDo - S/B PW	10	10191909
CENTRE PLATE B1 PW	10	10198982
CENTRE PLATE B1 PW	10	10198989



14271606

for 3 MINI-COM module system

Description	Pack qty.	Art No.
CENTRE PLATE ANTHRACIT	10	14271606
Central Plate for 3 mini-Com Mod, White	10	14271909

for aerial socket outlet

Description	Pack qty.	Art No.
C/p for aerial 2 & 3-hole - B alu	10	12031404
CENTRE PLATE B1 ANTHRACIT	10	12031606
C/p for aerial 2 & 3-hole - S/B PW	10	12031909
Z-ST F ANT-STD 2- U 3 LOCH S.1 WEIß	10	12038982
C. plate for aerial soc. 2/3hole S.1 pw	10	12038989
Central Plate Aerial Socket 4 Hole White	10	14831909
CENTRE PLATE ALU	10	14841404
CENTRE PLATE ANTHRACIT	10	14841606
Centre Plate Aerial Socket 4 Hole, White	10	14841909



12031404

for cable outlet

Description	Pack qty.	Art No.
C/plate for cable outlet & VDo - B alu	10	10191404
CENTRE PLATE B1 ANTHRACIT	10	10191606



10191404

for FCC (RJ45) outlets

Description	Pack qty.	Art No.
Centre Plate, 1 Slider, Aluminium Matt	10	11701404
Centre Plate, 1 Slider, Anthracite Matt	10	11701606
Centre Plate, 1 Slider, Polar white Matt	10	11701909
Centre Plate, 2 Slider, Aluminium Matt	10	11811404
Centre Plate, 2 Slider, Anthracite Matt	10	11811606
Centre Plate, 2 Slider, Polar White Matt	10	11811909
Centre Plate, 2 Slider, White Glossy	10	11818982
Centre Plate, 2 Slider, Polar White Glos	10	11818989
Centre plate for FCC 1g conn. box -B alu	10	14071404
Centre plate for FCC 1g conn. box -B ant	10	14071606
Centre plate for FCC 1g conn. box -B PW	10	14071909
Z-ST F UAE-ASD S.1 WEIß	10	14078982
C. plate for FCC soc. out. S.1 pw	10	14078989
Centre plate for FCC 2g conn. box -B alu	10	14091404
Centre plate for FCC 2g conn. box -B ant	10	14091606
FCC S/O C/PLATE (TWIN) - S1 P/WHITE	10	14091909
Z-ST F UAE/EDAT DESTK ISDN-ASD S.1 WEIß	10	14098982
C. plate for FCC soc. out. 2gang S.1 pw	10	14098989



11701404

For hotelcard switch

Description	Pack qty.	Art No.
C/plate for hotel card - B alu	10	16401404
C/plate for hotel card - B ant	10	16401606
C/p for Hotelcard switch - S1/B PW	10	16401909
HOTELC-SCH BDR U ROT LN S.1/B.3/B.7 WEIß	10	16408982
HOTELC-SCH BDR U ROT LN S.1/B.3/B.7 P-W	10	16408989



16401404





15061404

for key switch/key push button

Description	Pack qty.	Art No.
Centre plate for key switch/key push-but	10	15061404
Centre plate for key switch/key push-but	10	15061606
Centre plate for key switch/key push-but	10	15061909
Centre plate for key switch/key push-but	10	15068982
Centre plate for key switch/key push-but	10	15068989
Centre plate for key switch/key push-but	10	15071404
Centre plate for key switch/key push-but	10	15071606
Centre plate for key switch/key push-but	10	15071909
Centre plate for key switch/key push-but	10	15078982
Centre plate for key switch/key push-but	10	15078989



11241404

for light signals

Description	Pack qty.	Art No.
CENTRE PLATE B1 ALU	10	11241404
CENTRE PLATE B1 ANTHRACIT	10	11241606
CENTRE PLATE B1 PW	10	11241909
CENTRE PLATE B1 PW	10	11248982
CENTRE PLATE B1 PW	10	11248989
CENTRE PLATE S.1/B.3/B.7 ALU	10	11981404
CENTRE PLATE S.1/B.3/B.7 ANTHRACIT	10	11981606
CENTRE PLATE S.1/B.3/B.7 PW	10	11981909
Z-ST F LICHTS E14 S.1/B.3/B.7 WEIß	10	11988982
Z-ST F LICHTS E14 S.1/B.3/B.7 P-W	10	11988989



11961404

for loudspeaker outlet

Description	Pack qty.	Art No.
C/plate for loudspeaker S/O - B alu	10	11961404
C/plate for loudspeaker S/O - B ant	10	11961606
C/plate for loudspeaker S/O - S/B PW	10	11961909
-ST F LSP-STD 1F S.1 WEIß	10	11968982
Z-ST F LSP-STD 1F S.1 P-W	10	11968989



 
11461404

for pullcord switch/button

Description	Pack qty.	Art No.
CENTRE PLATE S.1/B.3/B.7 ALU	10	11461404
CENTRE PLATE S.1/B.3/B.7 ANTHRACIT	10	11461606
CENTRE PLATE S.1/B.3/B.7 PW	10	11461909
Z-ST F Z-SCH U Z-TA S.1/B.3/B.7 WEIß	10	11468982
Z-ST F Z-SCH U Z-TA S.1/B.3/B.7 P-W	10	11468989

for rotary dimmer incl. setting knob


Description	Pack qty.	Art No.
CENTRE PLATE S.1/B.3/B.7 PW	10	11378982
CENTRE PLATE S.1/B.3/B.7 PW	10	11378989
C/p w/setting knob for r/dimmer - B alu	10	11371404
C/p w/setting knob for r/dimmer - B ant	10	11371606
C/p w/setting knob for r/dimmer -S1/B PW	10	11371909

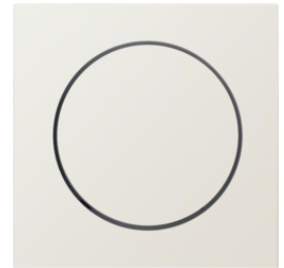

11378982


for speed controller incl. setting knob

Description	Pack qty.	Art No.
CENTRE PL.WITH KNOB B.1	10	11371424
C/p w/setting knob for speed cont.-B ant	10	11371626
C/p w/setting knob for Fan Reg. - S/B PW	10	11371929
CENTRE PL.WITH KNOB B.1	10	11378922
CENTRE PL.WITH KNOB B.1	10	11378929

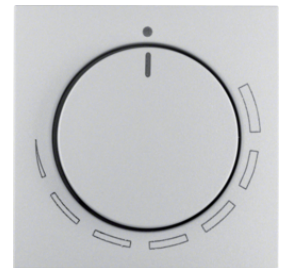 

11371424


for thermostat, time controlled


Description	Pack qty.	Art No.
CENTRE PLATE B.1 ALU	1	11161404
CENTRE PLATE B.1 ANTHRACI	1	11161606
CENTRE PLATE B.1 PW	1	11161909
RAUMTEMPERATURREGLER MIT WECHSELKONTAK..	1	11168982
RAUMTEMPERATURREGLER MIT WECHSELKONTAK..	1	11168989



11161404


for timer relay switch

Description	Pack qty.	Art No.
B.1/B.7 GLAS ZENTRALSTÜCK MIT DRUCKKNO..	10	16741404
B.1/B.3/B.7 GLAS ZENTRALSTÜCK MIT DRUC..	10	16741606
S.1/B.1/B.7 GLAS ZENTRALSTÜCK MIT DRUC..	10	16741909
S.1 Z-ST M DRUCKKNOPF HGL WEIß	10	16748982
S.1 Z-ST M DRUCKKNOPF HGL P-W	10	16748989

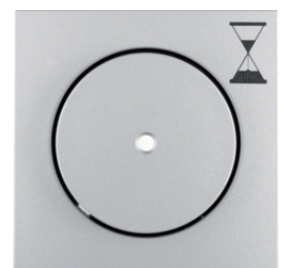 

16741404




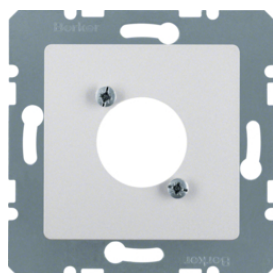 

14121404

for XLR circular plug-in connector


Description	Pack qty.	Art No.
CENTRE PLATE ALU	10	14121404
CENTRE PLATE ANTHRACIT	10	14121606
Central Plate XLR D-Series Connector whi	10	14121909

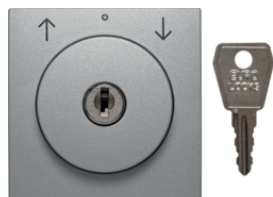 

10811404

**with lock for blind key switch/push button**

 Description	Pack qty.	Art No.
CENTRE PLATE B1 ALU	1	10811404
CENTRE PLATE B1 ANTHRACIT	1	10811606
CENTRE PLATE B1 PW	1	10811909
CENTRE PLATE B1 PW	1	10818982
CENTRE PLATE B1 PW	1	10818989
CENTRE PLATE B1 PW	1	10821909
CENTRE PLATE B1 PW	1	10828982
CENTRE PLATE B1 PW	1	10828989
CENTRE PLATE B1 PW	1	10831909
CENTRE PLATE B1 PW	1	10838982
CENTRE PLATE B1 PW	1	10838989

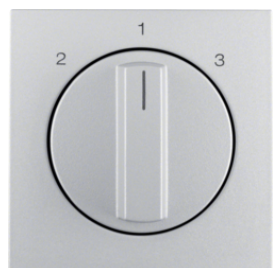

10841404

with rotary knob for 3-step switch

Description	Pack qty.	Art No.
CENTRE PLATE B1 ALU	1	10841404
CENTRE PLATE B1 ANTHRACIT	1	10841606
C/p w/rotary knob for 3-step sw-S.1/B PW	1	10841909
CENTRE PLATE B1 PW	1	10848982
CENTRE PLATE B1 PW	1	10848989
C/p w/rotary knob for 3-step sw-S1/B alu	1	10961404
CENTRE PLATE B1 ANTHRACIT	1	10961606
C/p w/rotary knob for 3-step sw-S.1/B PW	1	10961909
CENTRE PLATE B1 PW	1	10968982
CENTRE PLATE B1 PW	1	10968989




10801404

with rotary knob for blind rotary switch

Description	Pack qty.	Art No.
CENTRE PLATE B1 ALU	1	10801404
CENTRE PLATE B1 ANTHRACIT	1	10801606
CENTRE PLATE B1 PW	1	10801909
CENTRE PLATE B1 PW	1	10808982
CENTRE PLATE B1 PW	1	10808989

with rotary knob for mechanical time switch

Description	Pack qty.	Art No.
COVER PLATE S.1/B.3/B.7 ALU	1	16321404
COVER S.1/B.3/B.7 ANTHRACITE	1	16321606
COVER S.1/B.3/B.7 POLAR WHITE	1	16321909
COVER S.1/B.3/B.7 POLAR WHITE	1	16328982
COVER S.1/B.3/B.7 POLAR WHITE	1	16328989
COVER S.1/B.3/B.7 ALU	1	16331404
COVER S.1/B.3/B.7 ANTHRACITE	1	16331606
C/PLATE W/SETTING KNOB -MECH.TIMER 0-120	1	16331909
COVER S.1/B.3/B.7 POLAR WHITE	1	16338982
COVER S.1/B.3/B.7 POLAR WHITE	1	16338989

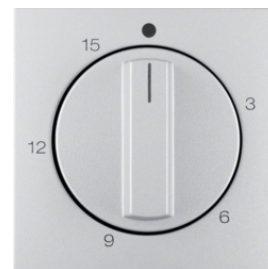 

16321404

with TAE output

Description	Pack qty.	Art No.
CENTRE PLATE S.1/B.3/B.7 ALU	10	10331404
CENTRE PLATE S.1/B.3/B.7 ANTHRACIT	10	10331606
C/plate for TAE & loudspeaker - S/B PW	10	10331909
CENTRE PLATE F.TAE SOCKET	10	10338912
CENTRE PLATE F.TAE SOCKET	10	10338919



10331404