



# Berker - Blind/shutter controls

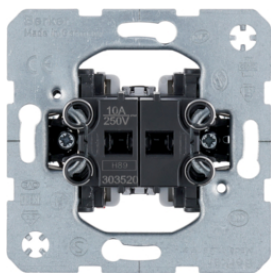

303520

**Switch insert (1 pole)**

Description	Pack	Art No.
Rockers switch for shutters inserts	10	<b>303520</b>

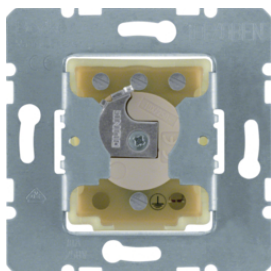

382120

**Key switch**

Description	Pack	Art No.
KEY SWITCH FLUSH-MOUNT.	10	<b>382120</b>
KEY SWITCH FLUSH-MOUNTING	10	<b>383120</b>
KEY SWITCH FLUSH MOUNTING	10	<b>383620</b>
KEY SWITCH CH.OV.FLUSH	10	<b>385620</b>



1861

**Accessories**

Description	Pack	Art No.
ARRESTING DISC	10	<b>1861</b>